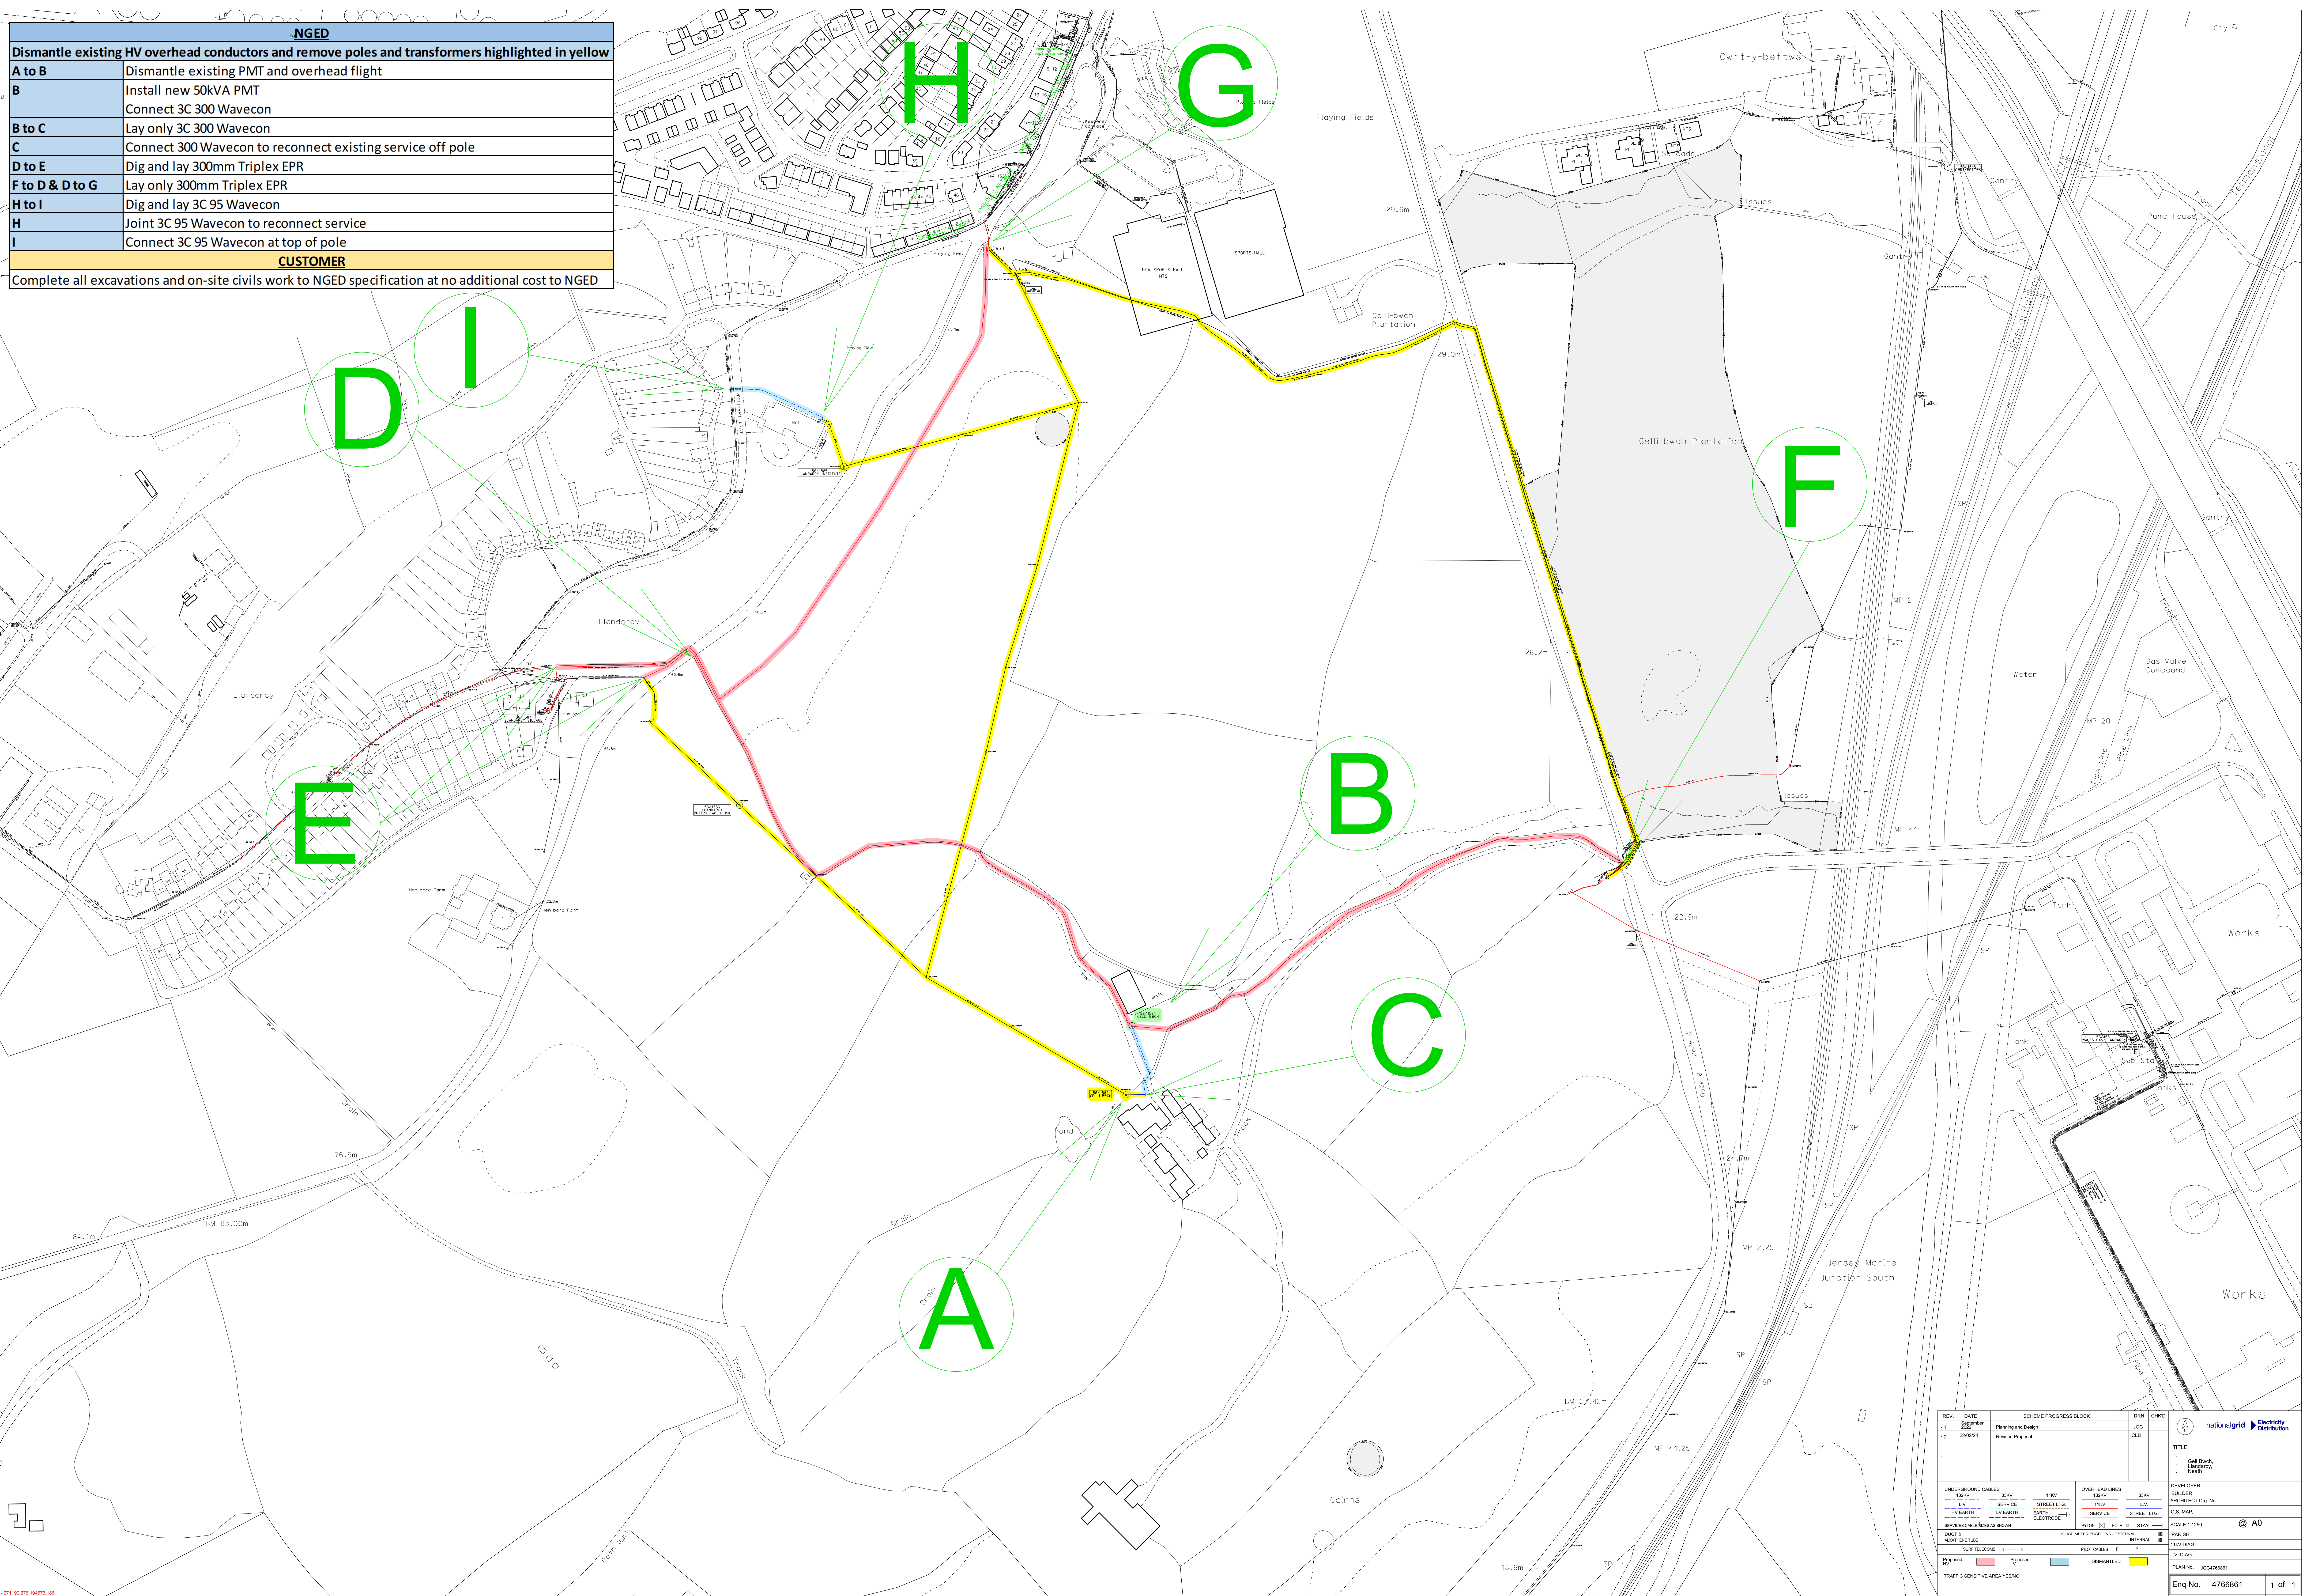


NGED	
Dismantle existing HV overhead conductors and remove poles and transformers highlighted in yellow	
A to B	Dismantle existing PMT and overhead flight
B	Install new 50kVA PMT Connect 3C 300 Wavecon
B to C	Lay only 3C 300 Wavecon
C	Connect 300 Wavecon to reconnect existing service off pole
D to E	Dig and lay 300mm Triplex EPR
F to D & D to G	Lay only 300mm Triplex EPR
H to I	Dig and lay 3C 95 Wavecon
H	Joint 3C 95 Wavecon to reconnect service
I	Connect 3C 95 Wavecon at top of pole
CUSTOMER	
Complete all excavations and on-site civils work to NGED specification at no additional cost to NGED	

[illegible]