



- Trees for removal to be identified from the drawing and marked by an arboriculturist.
- No vehicles to enter the grass verge or root protection zone during tree removal or fencing installation/removal.
- Fencing to be installed prior to any construction works (including demolition, materials delivery, works compound installation).
- The location of the tree protective fencing is indicative only and must not be directly measured from this plan. Its true location must be surveyed accurately on site and where applicable be measured from the tree centre by the stated dimension value.
- Fencing to remain in place until all construction works have ceased.

BS5837: 2012 Recommendations (extract)


6.2.2 - Barriers

6.2.2.1 - Barriers should be fit for the purpose of excluding construction activity and appropriate to the degree and proximity of work taking place around the retained tree(s). Barriers should be maintained to ensure that they remain rigid and complete.

6.2.2.2 - The default specification should consist of a vertical and horizontal scaffold framework, well braced to resist impacts, as illustrated in Figure 2. The vertical tubes should be spaced at a maximum interval of 3m and driven securely into the ground. Onto this framework, welded mesh panels should be securely fixed.

Fencing Specification


The fencing will comprise of standard GS7/Heras styled steel self-supporting security fencing panels. The panels must be securely clamped together. They must be secured to the ground with robust steel stakes to a depth of 600mm. These are securely clamped to the panels. The use of steel mesh panels in conjunction with just clamps and self supporting bases is not acceptable for use. They must be secured to the ground with stakes to prevent movement. Where stated, additional bracing of the panels must use angled scaffolding poles to prevent further movement (see diagram).

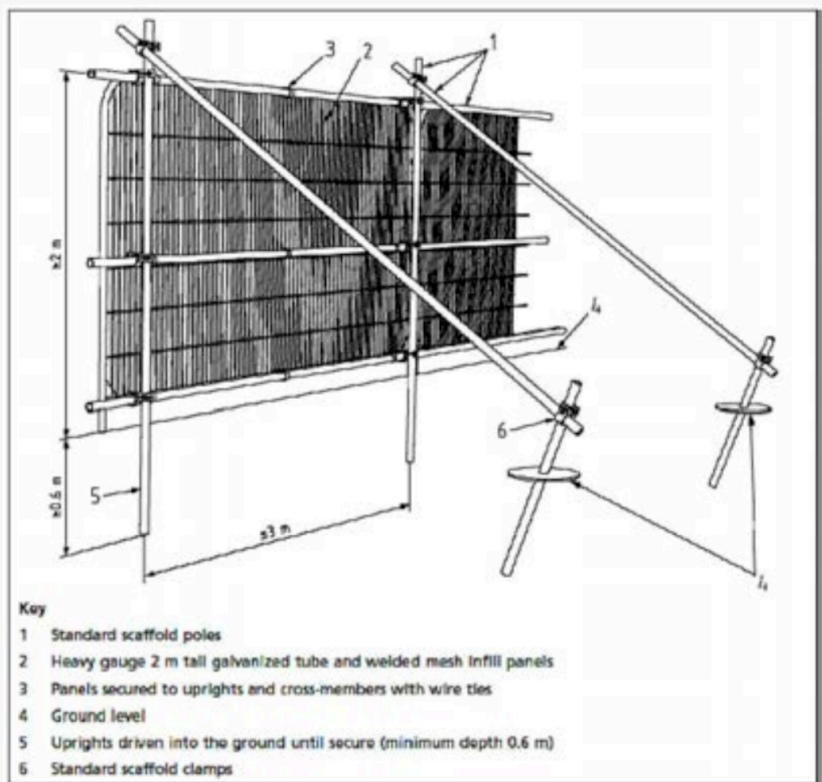

Why Is Fencing Erected Around Trees?

- The major cause of damage to trees on construction sites is due to soil compaction.
- Roots use the spaces between soil particles to obtain Oxygen, Water and Nutrients.
- Heavy plant and machinery compresses (compacts) the soil, squashing out the air spaces and preventing root function.
- A compacted soil structure will stay compacted.
- Consequently the tree suffers and will show signs of branch die-back.
- Symptoms such as die-back may take several years to appear.
- Soil compaction over roots can be prevented by maintaining a fenced exclusion zone over the tree roots.
- The exclusion zone is calculated using British Standard 5837.
- Protective Fencing is installed around the calculated area.
- Protective Fencing is a condition of planning approval, if it is removed or repositioned the construction firm is in breach of a condition and may be subjected to legal action.

DRAWING TO BE READ IN CONJUNCTION WITH Tree Survey and Tree Constraints Plan prepared by Treescene as dated 25/07/2024

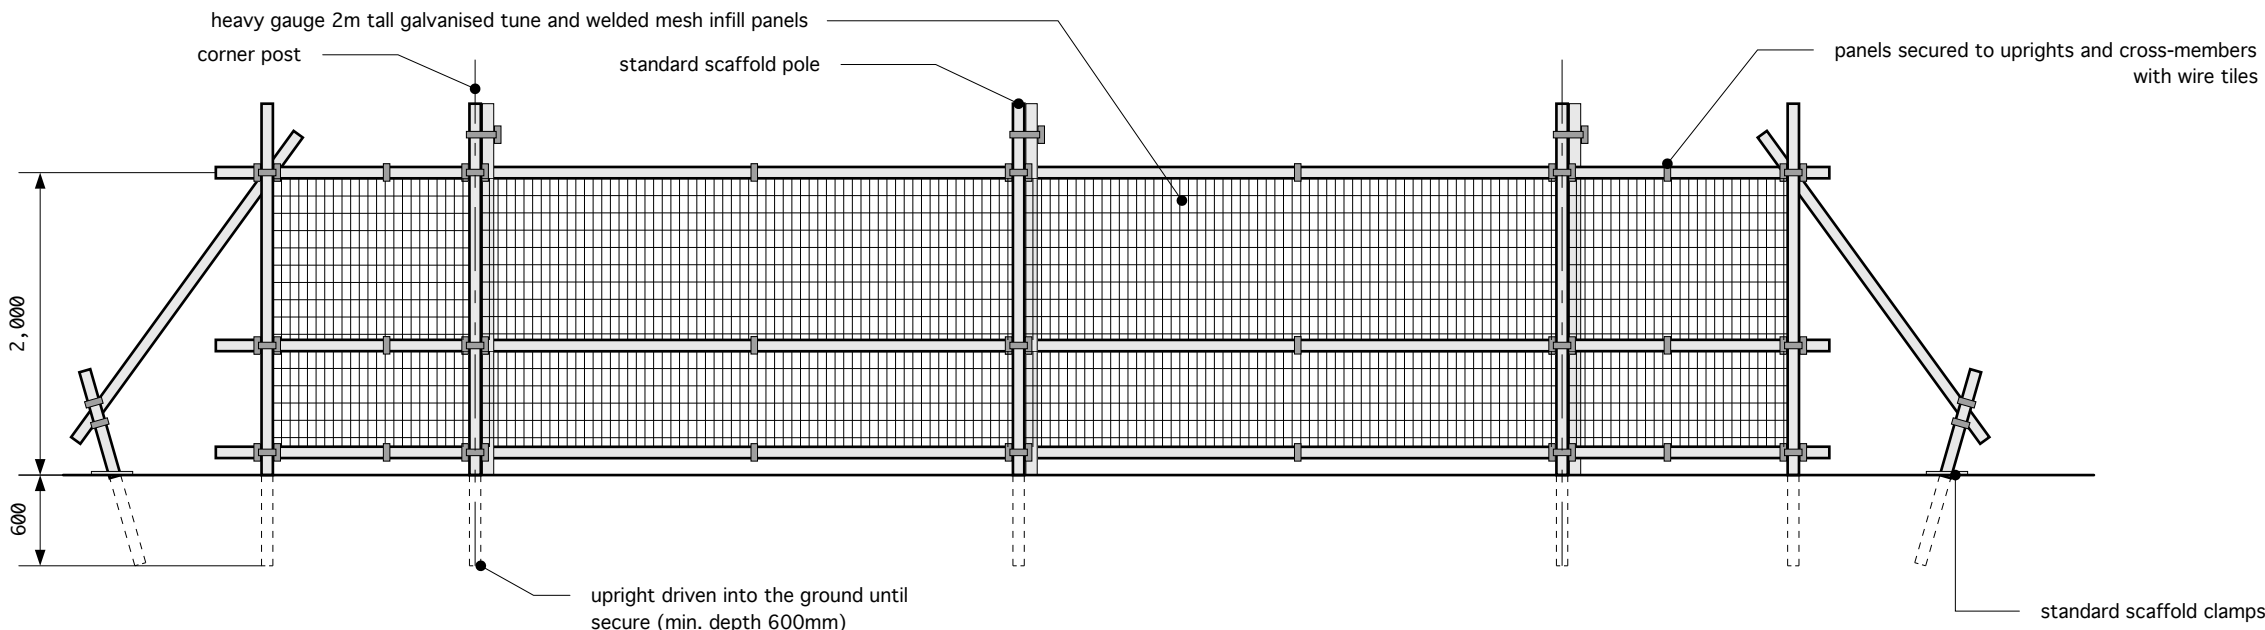


indicative elevation 1:50

actual size to be determined on site in accordance with marked locations above

7.0 TREE PROTECTION - FENCING DETAIL

7.1 BS 5837:2012 Figure 1: Default specification for protective barrier

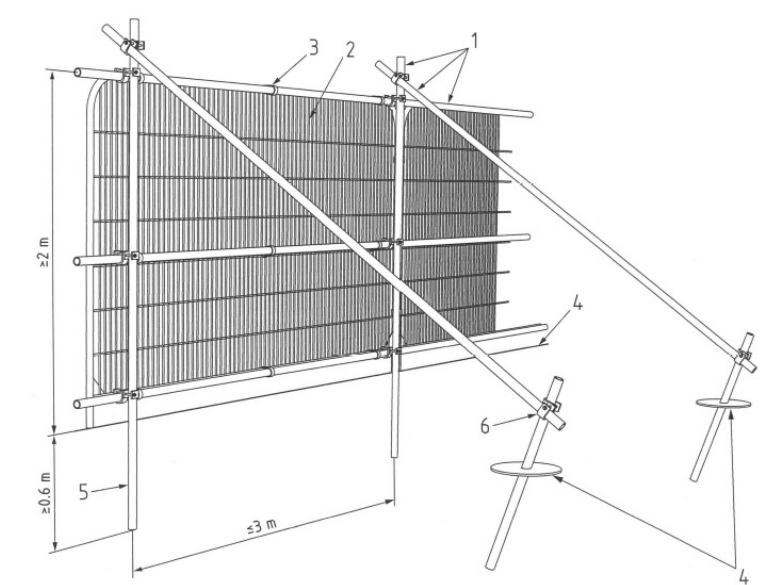

- Key
- Standard scaffold pole
 - Heavy gauge 2m tall galvanized tube and welded mesh infill panels
 - Panels secured to uprights and cross-members with wire ties
 - Ground level
 - Uprights driven into the ground until secure (minimum depth 0.6m)
 - Standard scaffold clamps

tree protection fence



root protection area

Rev	Date	Action
1	25/07/2024	Issue for construction